

VIDEOCADE 2004 BRICKYARD/CLOWNS OPERATING INSTRUCTIONS

BRICKYARD (1 to 4 players)

Insert Videcade 2004 into your unit and press the Reset button to get the game selection displayed on your television screen.

The object of BRICKYARD is to eliminate as many bricks as possible by bouncing a ball off a paddle upward into the bricks. The green bricks are worth 3 points, the blue and red bricks are worth 5 points. The player who eliminates the last brick is given an additional 50 points and the brickyard resets.

Press (1) on the keypad to play BRICKYARD. The Professional Arcade will ask you to:

"CHOOSE DIFFICULTY"

1. PROFESSIONAL — small paddle, fast ball
2. ADVANCED — small paddle, slow ball
3. INTERMEDIATE — large paddle, fast ball
4. BEGINNER — large paddle, slow ball
5. CUSTOM — allows selection of different difficulty for different players.

After choosing the difficulty level, the Professional Arcade will ask you to:

"ENTER # OF PLAYERS"

You will then be asked to:

"ENTER # OF BALLS"

When playing less than 10 balls, you must enter (=) to start play.

Hand Controls

Knob	Moves paddle left or right
Trigger	Releases ball into playing area
Joy Stick	No function

CLOWNS (1 to 4 players)

Clowns plays much like BRICKYARD with the exception that you are catapulting a clown into the air off a teeter-totter to break balloons.

Green balloon	1 point
Red balloon	3 points
Blue balloon	5 points

The player that eliminates the last balloon in any row is awarded a bonus and that row of balloons resets.

Green balloons . . .	20 point bonus
Red balloons	40 point bonus
Blue balloons	60 point bonus

Press (2) on the keypad to play CLOWNS. The Professional Arcade will ask you to:

"ENTER # OF PLAYERS"

After the number of players has been decided, the Professional Arcade will ask you to:

"ENTER # OF CLOWNS"

When playing less than 10 clowns, you must enter (=) to start play.

Hand Controls


Knob	Moves teeter-totter left to right
Trigger	Releases clown into playing area
Joy Stick	No function

MANUFACTURED BY:
Bally Consumer Products Division
Bally Manufacturing Corporation
10750 W. Grand Avenue
Franklin Park, IL 60131

Bally® PROFESSIONAL
videocade™ 2004



BRICKYARD

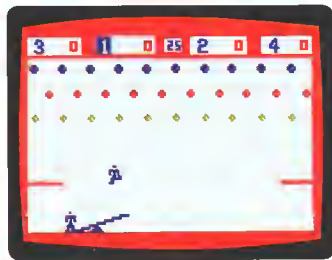

CLOWNS